## Jeep JK 2 Door Installation Instructions

### PLEASE READ CAREFULLY BEFORE STARTING INSTALLATION

To safely lift and install this hardtop, you will need the assistance of at least one other person.

Follow the instructions and perform the steps in the sequence given. Short cuts to the directions may result in an unsatisfactory installation.

# **WARNING!**

The top on this vehicle is designed only for additional protection against the elements.

Do not rely on the top to contain occupants within the vehicle or to protect against intrusion of foreign objects, nor injury during an accident.

Make sure all brackets and screws are tight. Periodically check for tightness and retighten when necessary.

#### **WEAR SEAT BELTS AT ALL TIMES**

Parts included in the installation kit.

6 each Bolt 5/16 x 18 x 1 1/4

6 each Nut 5/16 x 18

6 each 3/8" USS Flat Washer

Rev. 11/10/19



Remove side windows. (Left & right) 1.




3. Disengage soft top in rear corner. (Left & right)




Remove retainers. (Left & right) 5.



Disengage front clips and remove 2 2. screws holding the retainer loop. Remove loop. Both sides.

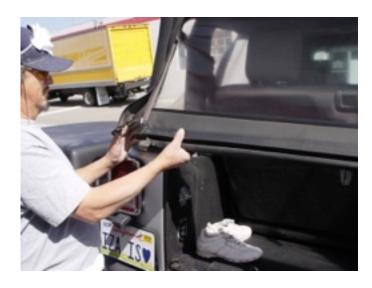

Disengage soft top rear bar from 4. retainers. (Left & right)

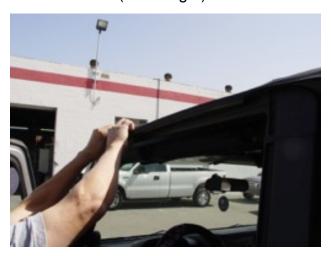

6. Disengage soft top from the top rail retainers. (Left & right)



7. Unscrew the 2 soft top brace attach points. (Left & right)



8. Disengage soft top rail retainers. (Left & right)



9. Remove rails. (Left & right)



10. Remove soft top from vehicle.



11. Do Not Remover Front End Seals.



12. Do Not Remover Rear End Seals.



13. Using at least 2 people, place hardtop on the Jeep.



15. Install the side rail bolts using the supplied washers and nuts. Do not tighten.



17. Tighten the rail bolts down and engage the front clips. Make sure the doors open and close freely. It may be necessary to adjust the top forwards or backwards.



14. It should look like this in the front.



16. Adjust the camlocks to medium tension and engage the camlocks.

Made with PRIDE in the USA. ENJOY.

## ATTN: STATE OF CALIFORNIA CONSUMERS



WARNING: CANCER AND REPRODUCTIVE HARM WWW.P65WARNINGS.CA.GOV.